



USE SLEEK STREAK
PROP CUT TO 4 1/2 DIA.


1/32 SHEET TIP CROSS GRAIN
CURVE AS SHOWN

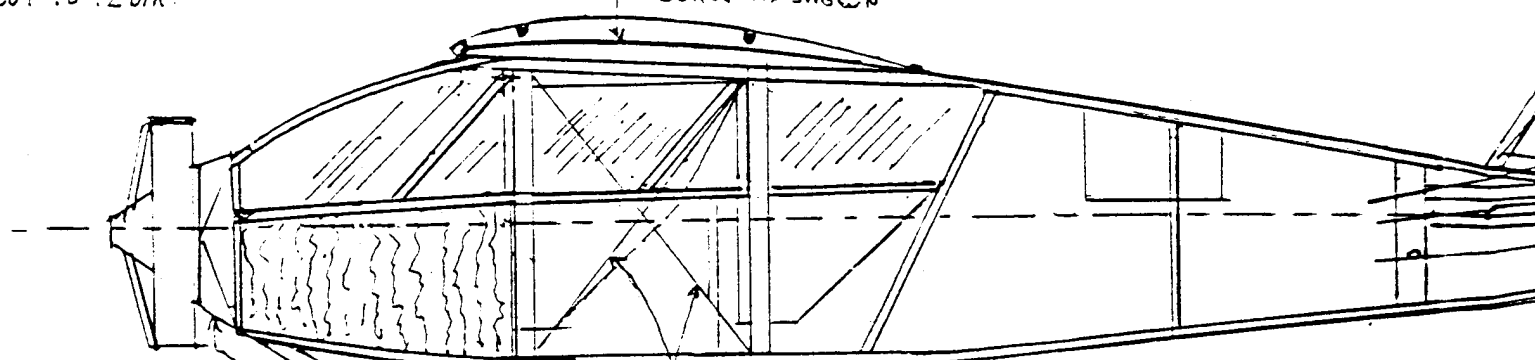


VOILE PIRE
1/4" SHEET

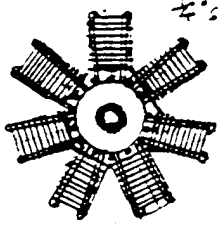


WIRE BANDING
TO
STRUTS.

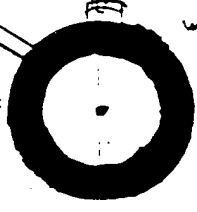


36° ANGLE

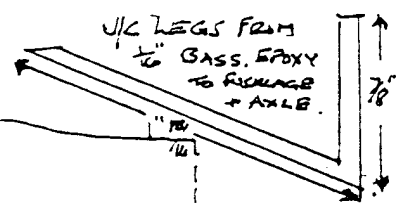


7 CYL WALTER RADIAL 25 H.P.

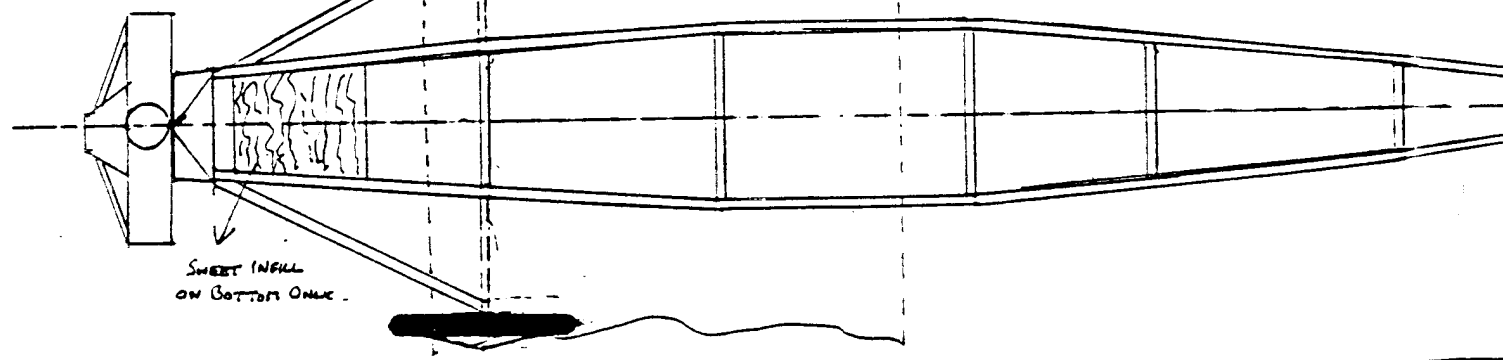

SHEET INFILL
ON BOTTOM ONLY.

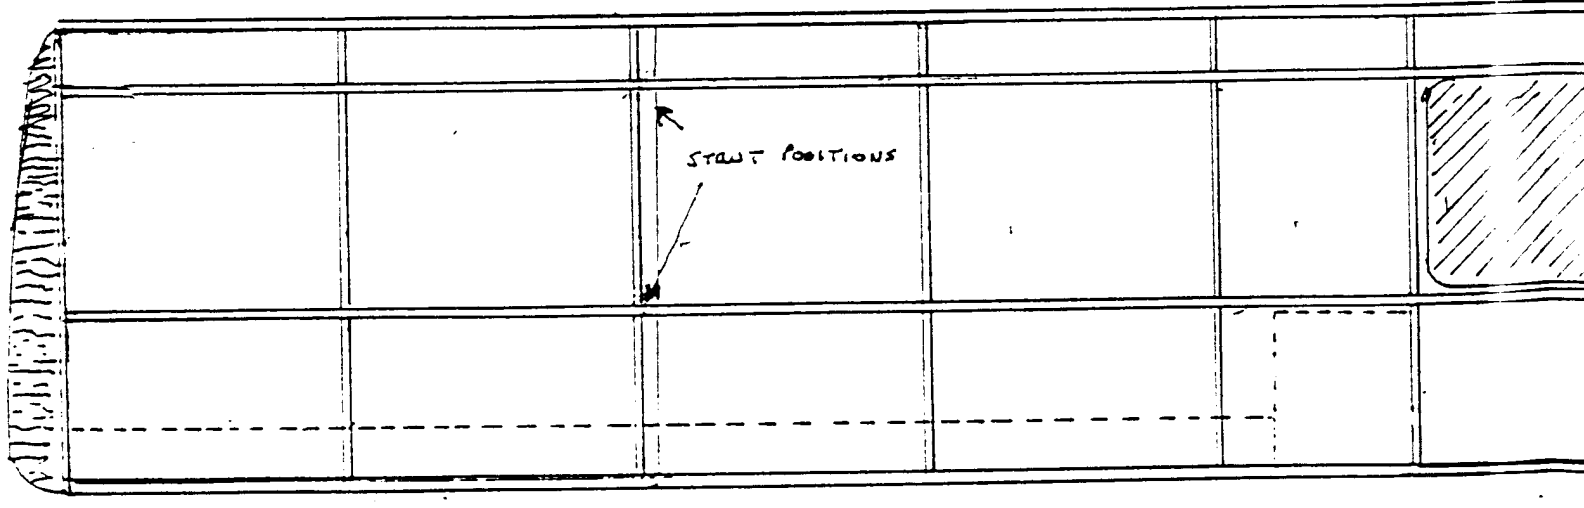

STRUT POSITIONS



FRONT VIEW

WING STRUTS 4 OFF 1/8" x 1/16" HARD BALSA.

BREDA 15

ITALY 1930


PSEUDO_DIME_SCALE

by



JOE_FERGUSON

Clyde Valley Flyers


SCOTLAND

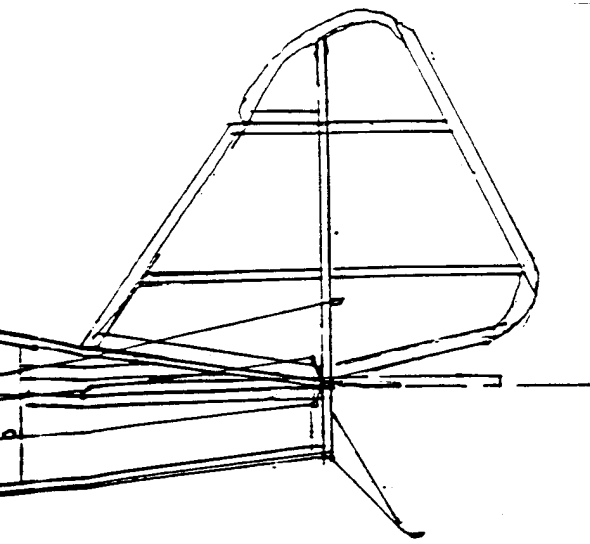

ALL STRUCTURE $\frac{1}{16}$ Balsa. WITH $\frac{1}{16}$ SHEET TIPS TO RUDDER
AND STABILIZER + NOSE INFILL WING TIPS $\frac{1}{16}$ SHEET CROSSGRAIN

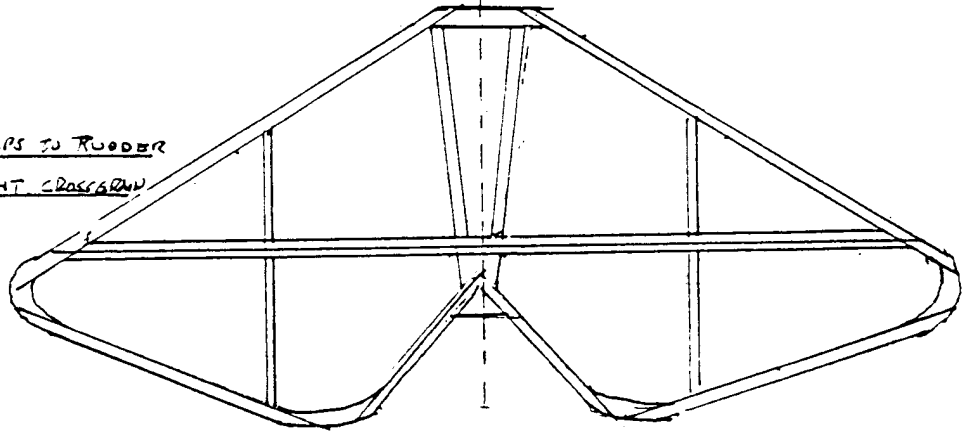

LIEGE

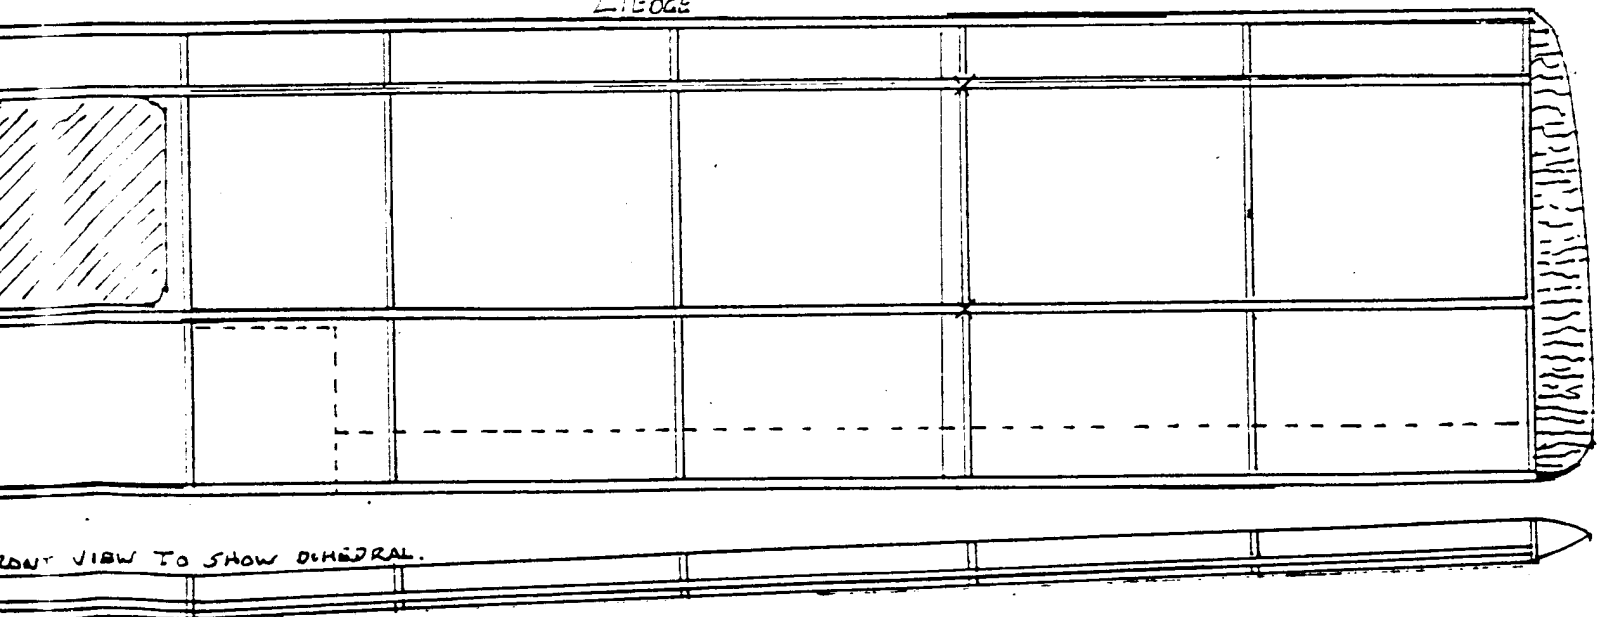

FRONT VIEW TO SHOW DIHEDRAL.