


NOSE PLUG

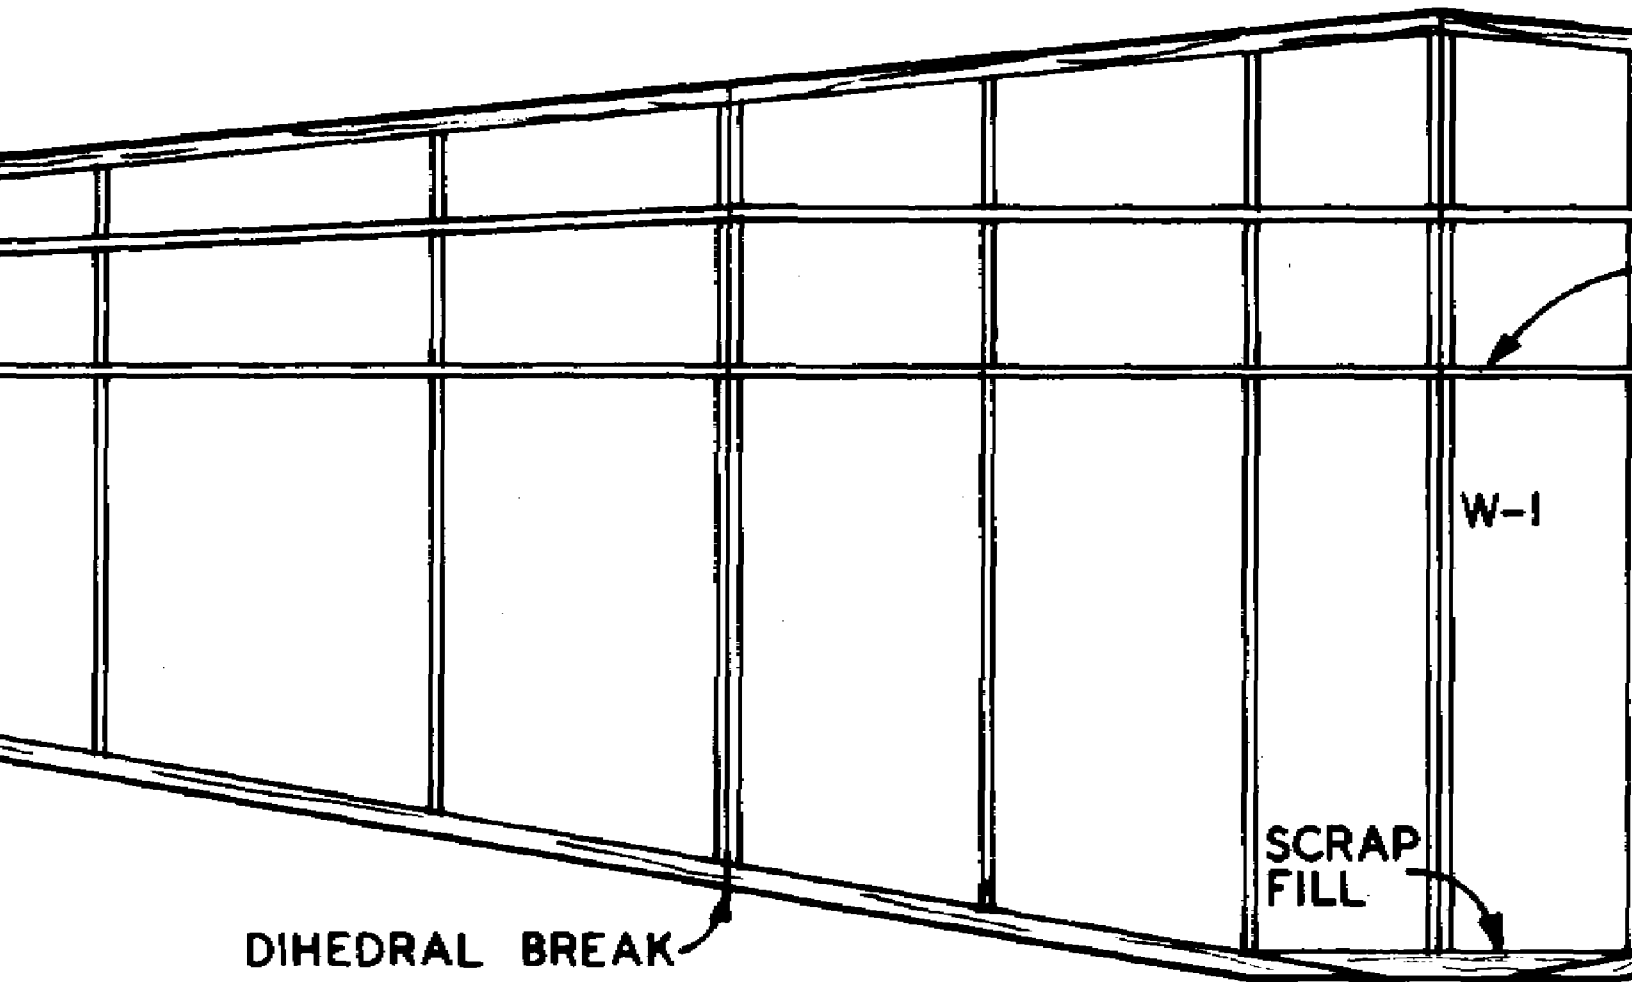


DIHEDRAL BREAK

W-1

SCRAP FILL

WING

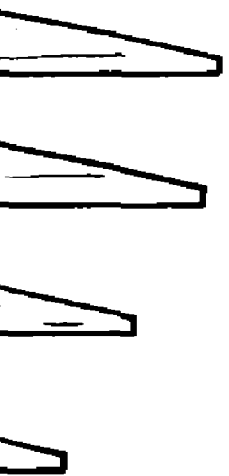

W-8




DIHEDRAL D
(NOT TO SC)


RIB PATTERNS


2 EA. OF 1/32 Balsa
EXCEPT W-4 WHICH
NEEDS 4 RIBS OF MED.
1/16.

SUPERCHARGER TOP VIEW

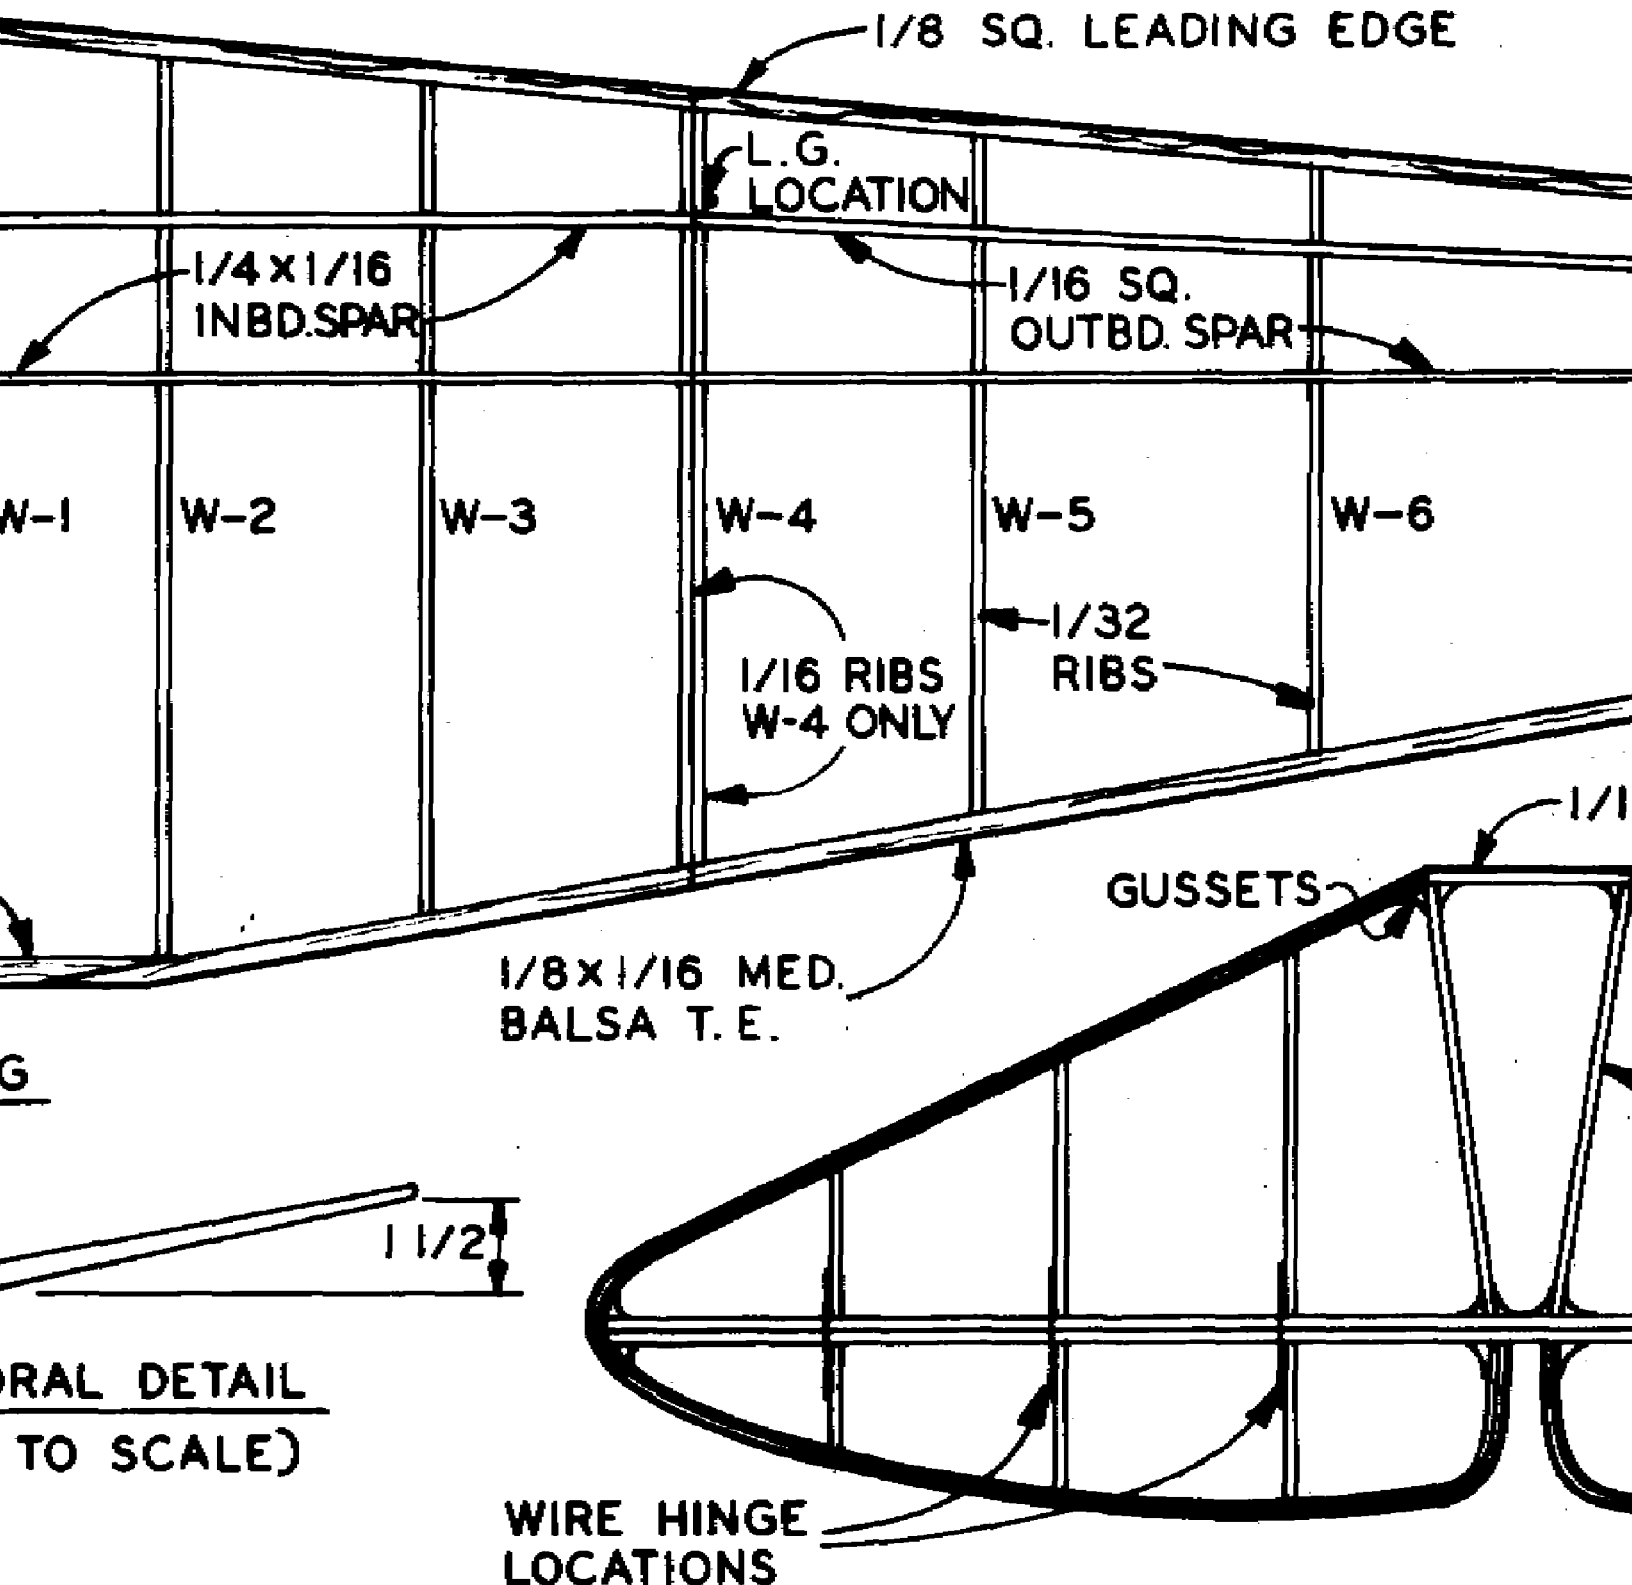


ORAL DETAIL
(TO SCALE)

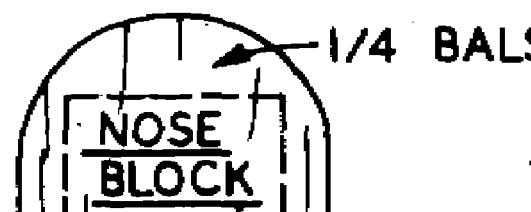

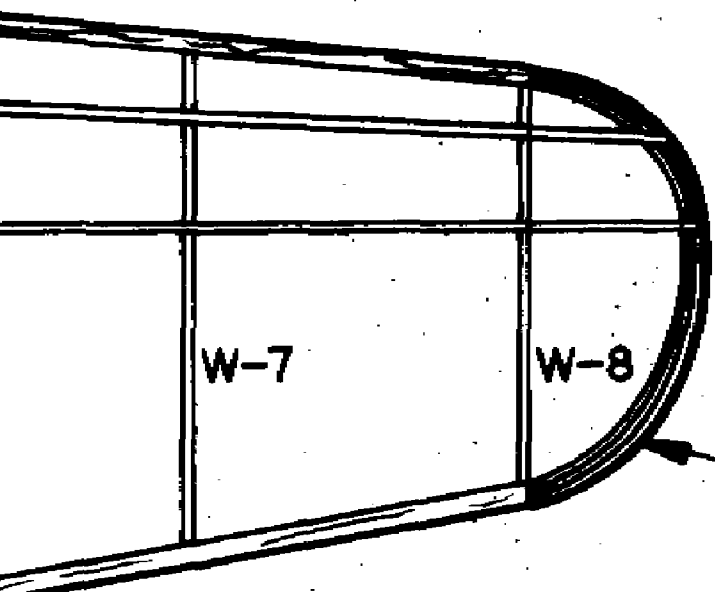

WING TIPS
3 PCS. 1/32 x 3/32
BALSA LAMINATED

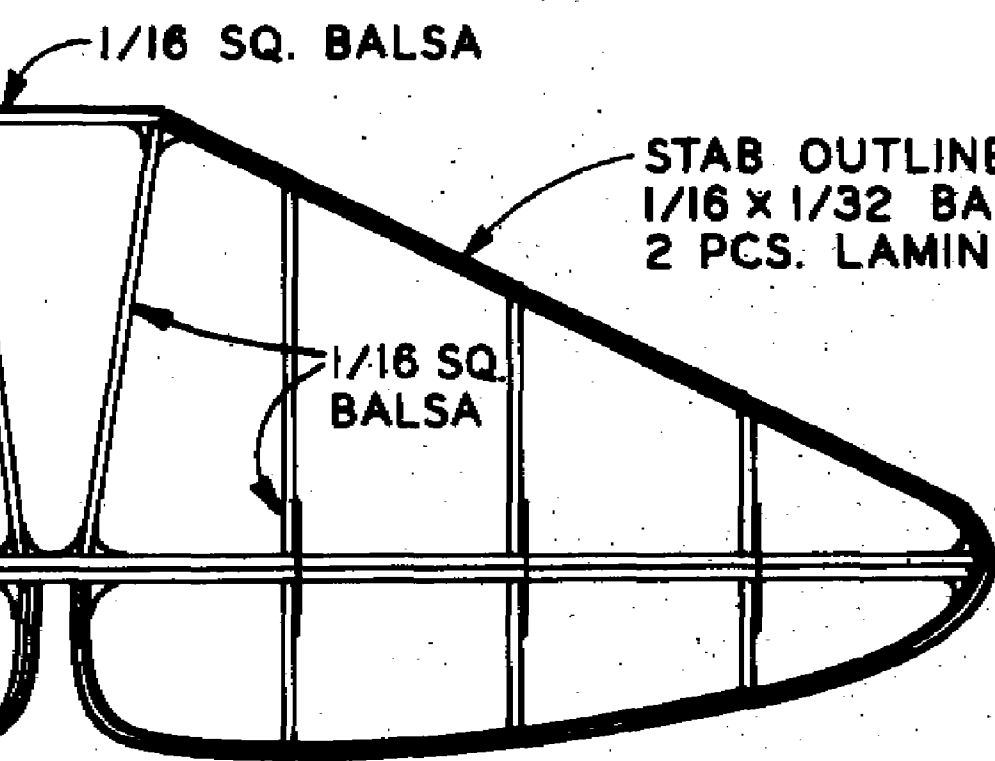

STAB OUTLINE
1/16 x 1/32 BALSA
2 PCS. LAMINATED

STABILIZER

4 BALSA

1/16 BALSA



REMOVE SECTION
AFTER STRINGER

NOSE PLUG

USE PECK-POLYMERS
8" PROP. 3° DOWN THRUST
4° RIGHT THRUST

1/4 Balsa
NOSE BLOCKS

Balsa Spinner

1/16 SHEET FILL

1/32

SCRAP Balsa
L.G. LEG

WRAP LEG
WITH STRIPS
OF PAPER


L.G.
DOOR

WHEELS
1/16 Balsa
3 PCS.

L.G. DOORS - 2 EA.
BOND PAPER OR
1/32 Balsa
(TRIM LENGTH TO SUIT)


L.G.
1/32

LANDING GEAR DETAILS

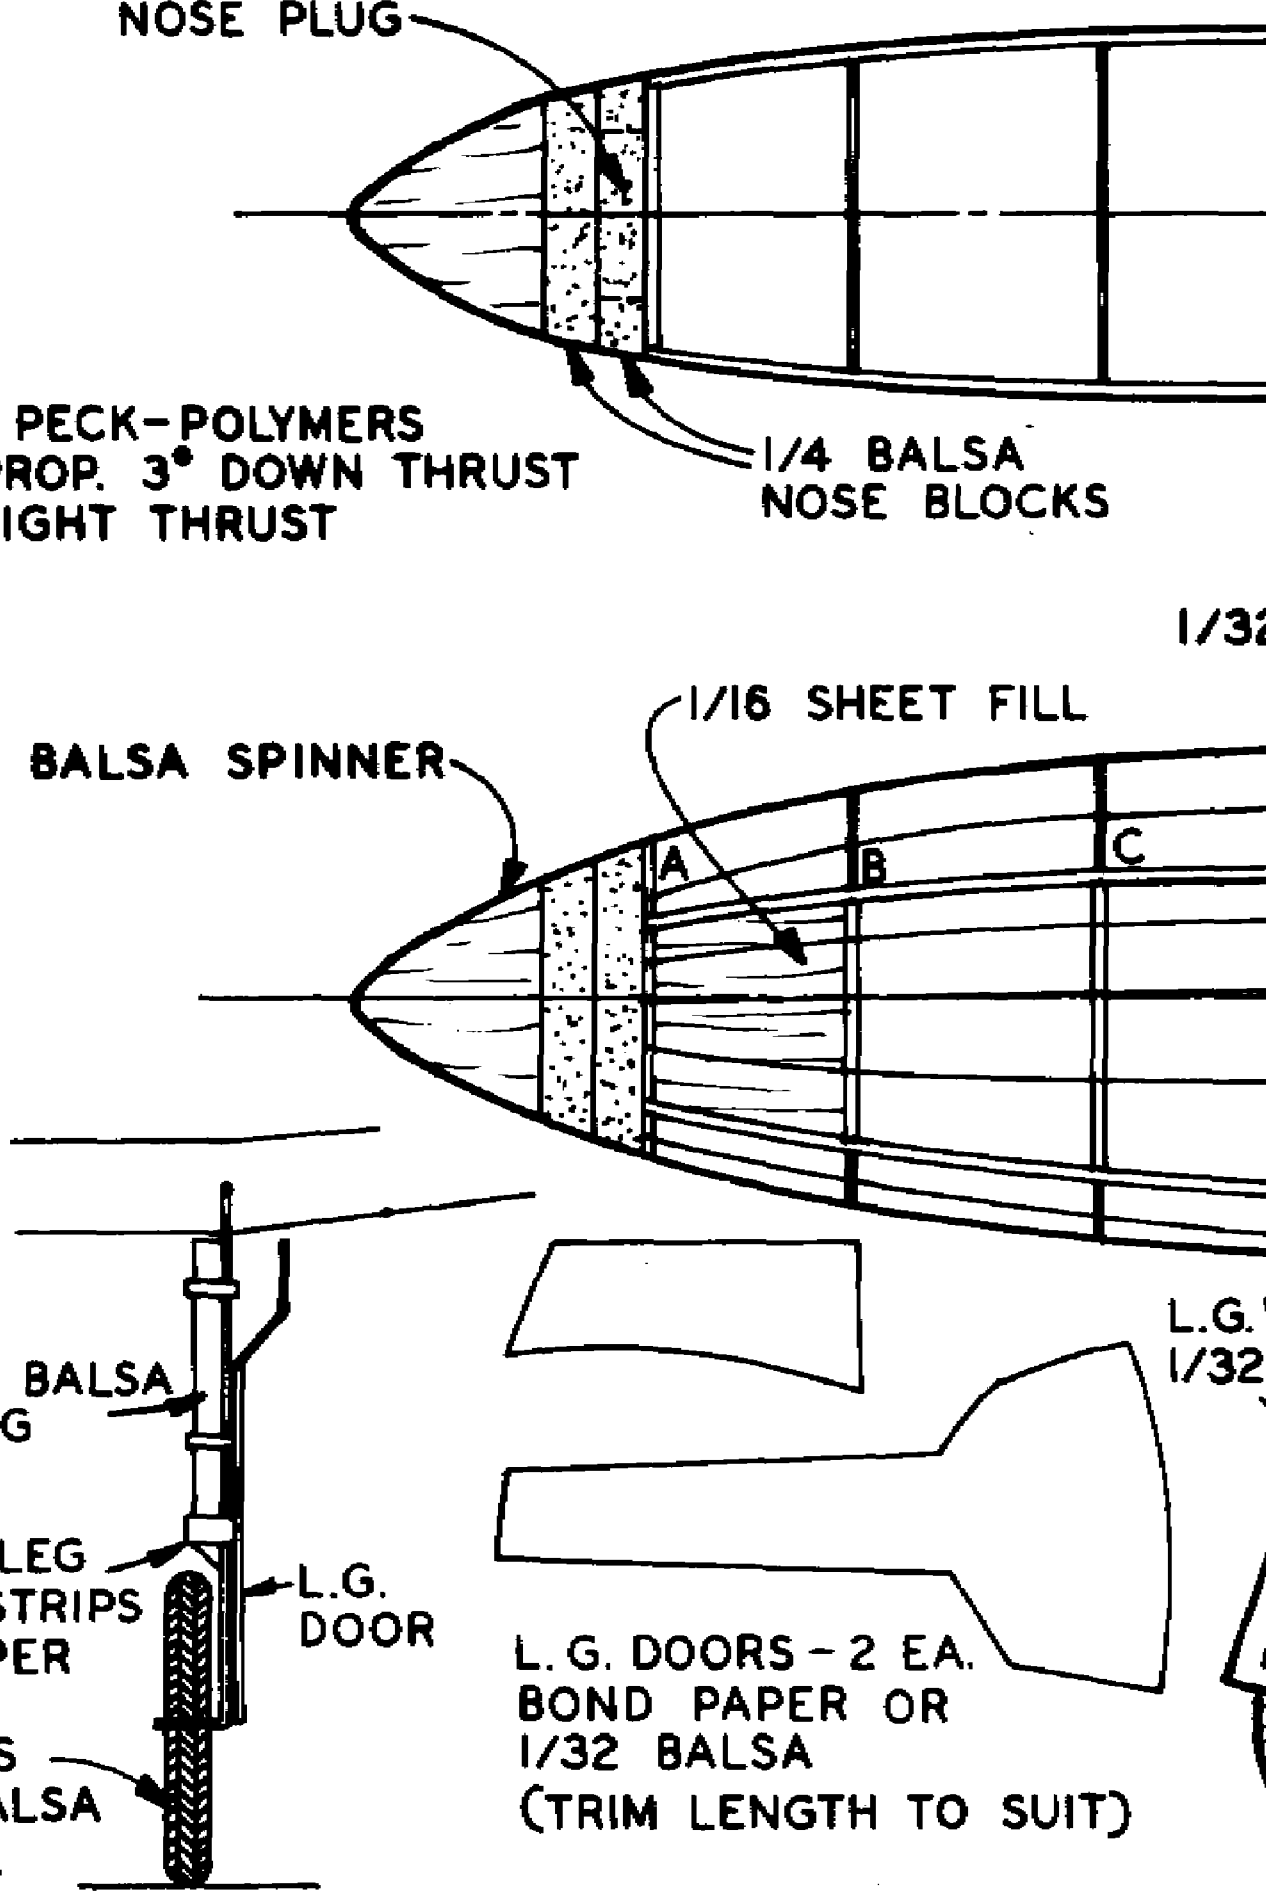

1/16.

SUPERCHARGER TOP VIEW

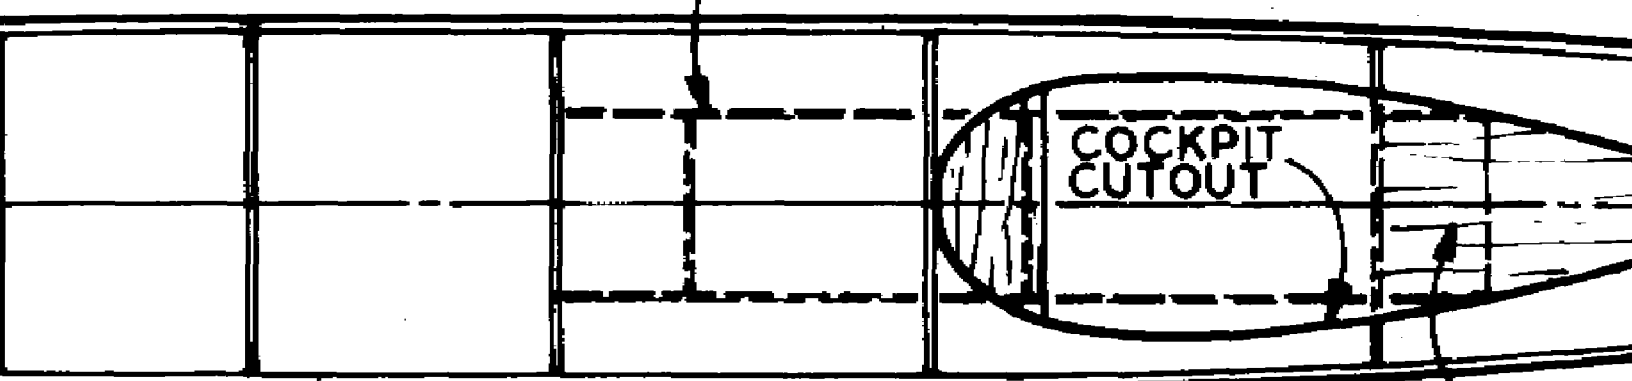


FUSELAGE - TOP VIEW

1/32

1/32 FORMERS

SHEET FILL

CANOPY

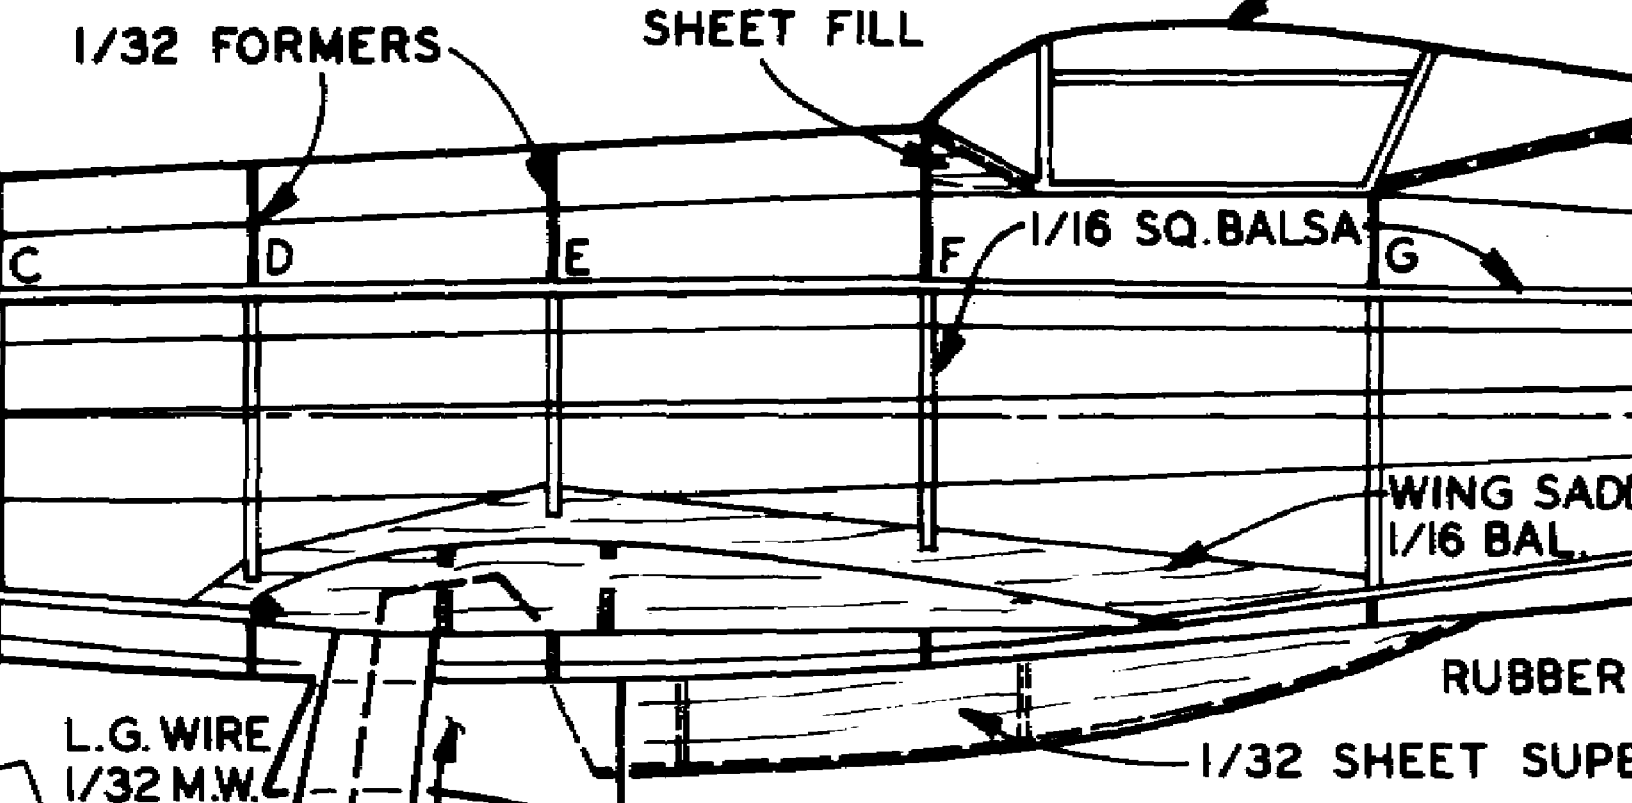

1/16 SQ. BALSA

WING SADDLE
1/16 BAL.

RUBBER

1/32 SHEET SUPERCHARGER

L.G. WIRE
1/32 M.W.L.


L.G. DOORS

**FUSELAGE -
SIDE VIEW**


WHEEL HUBS
OF CARD STOCK

FILLET PART

2 EA. BOND
OR 1/32 BOND

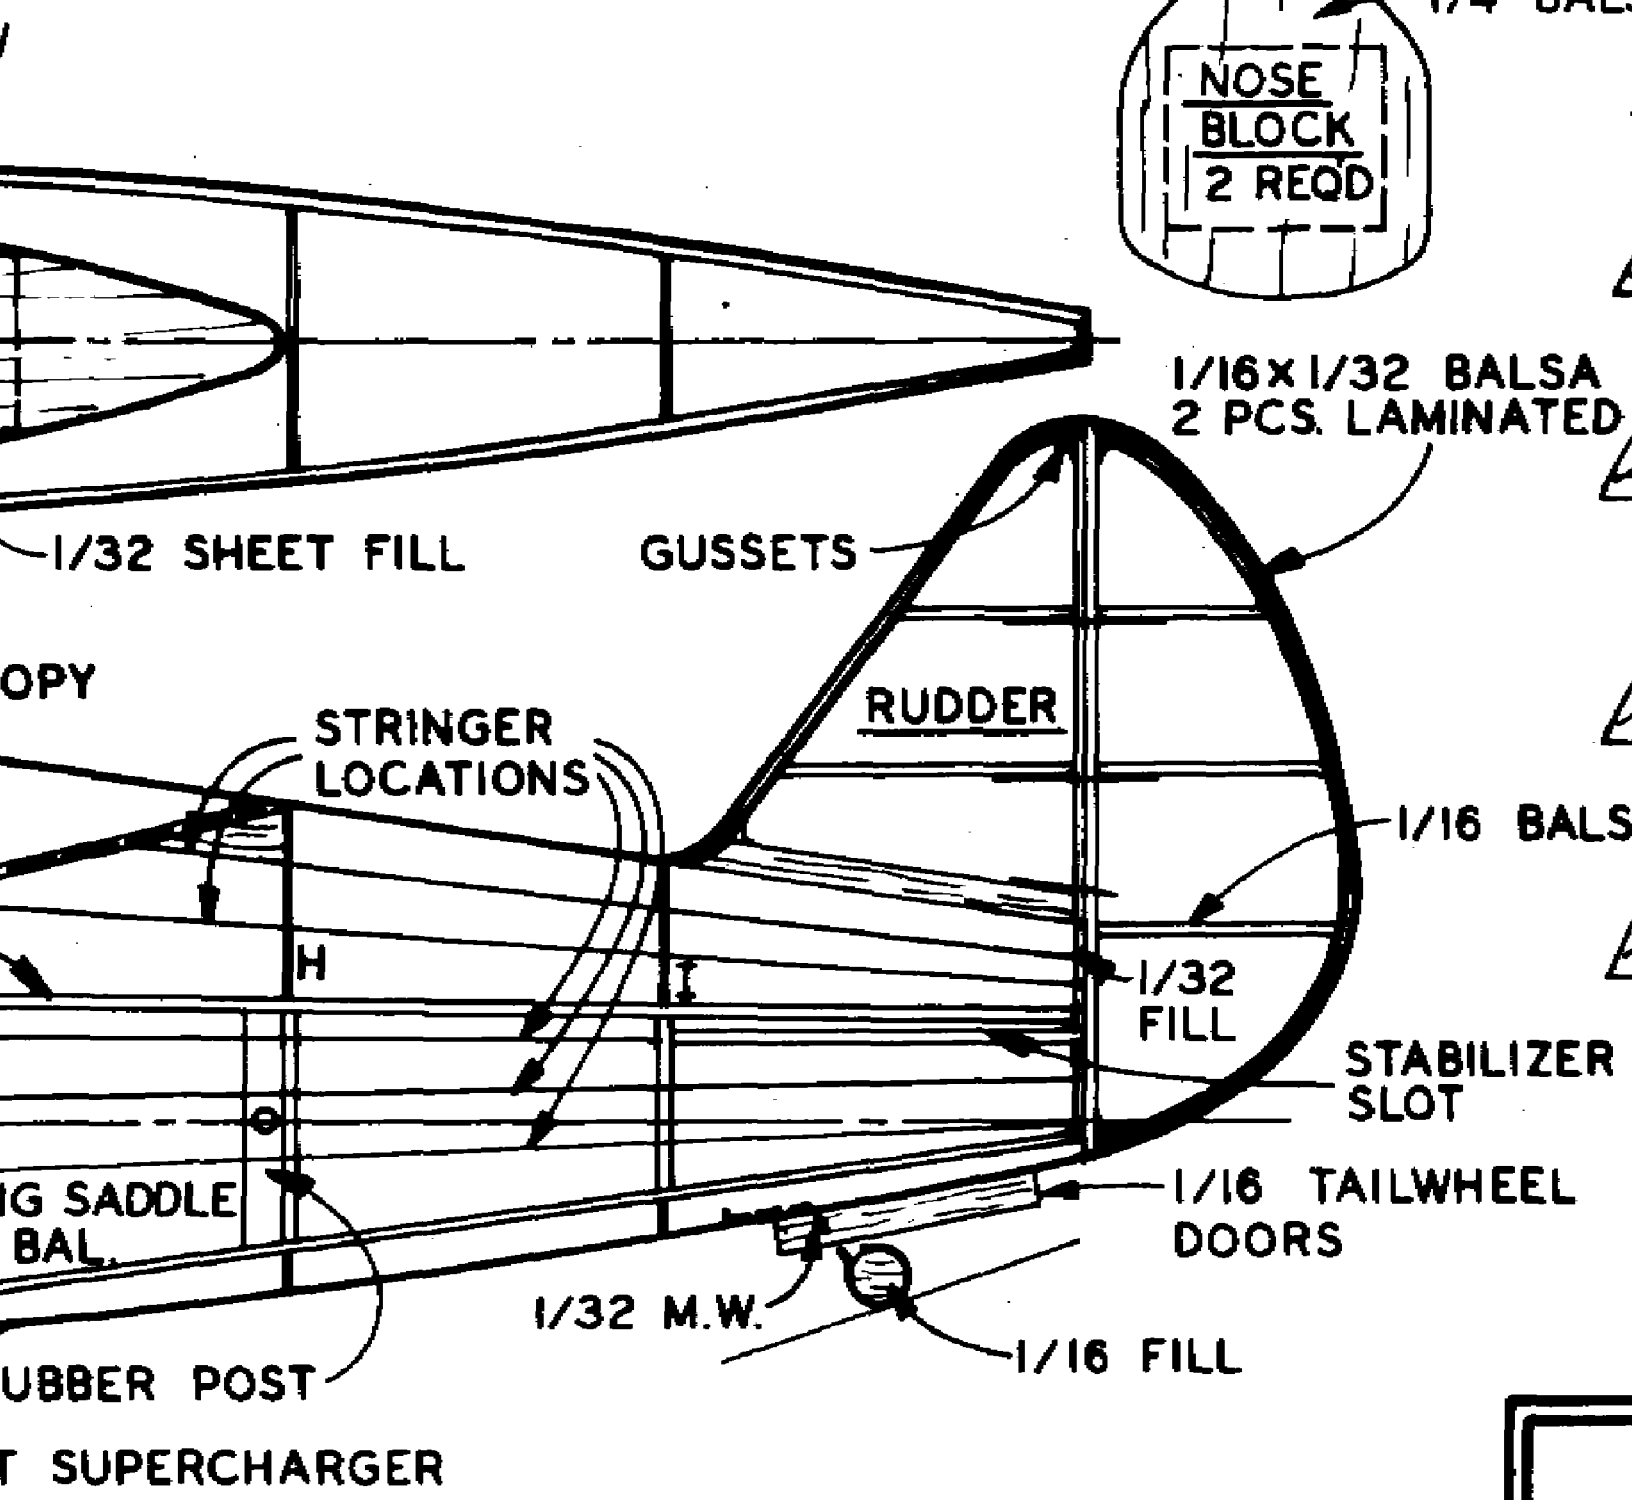


LET PATTERNS
 A. BOND PAPER
 1/32 Balsa

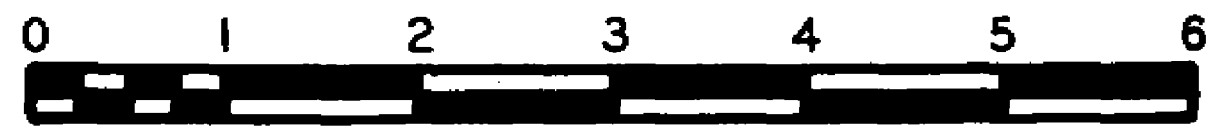

SCALE IN INCHES



REMOVE SECTION
AFTER STRINGER
INSTALLATION.

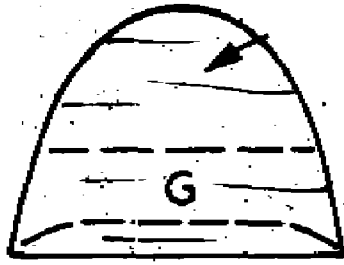

ALSA
NATED



S Balsa



LIZER

BULKHEAD PATTERNS

HEEL

ALL FORMERS OF 1/32 UNLESS
OTHERWISE INDICATED. SOLID
LINE INDICATES TOP FORMERS.
DOTTED LINE INDICATES BOTTOM
FORMERS.

MIG-3

RUBBER POWERED AMA SCALE

DESIGNED AND DRAWN

BY

LARRY KRUSE

INKED BY LOU WOLGAST