

# NCI470

$\frac{3}{16} \times \frac{3}{32}$  T.E.

RECOMMENDED

FUSELAGE  
TOP VIEW

MATERIALS  $\frac{1}{16}$ " SH. OR SQ  
WHERE NOTED

FUSELAGE

RUDDER




NCI  
470

FRONT VIEW

STABILIZER

NOTE. INSTALL STAB.  
FIRST. THEN RUDDER  
GLUE STAB. AT REAR  
ONLY. SHIM FRONT TOP  
OR BOTTOM TO FLIGHT  
TRIM, THEN GLUE.

REAR VIEW  
A 16 IN. SCALE

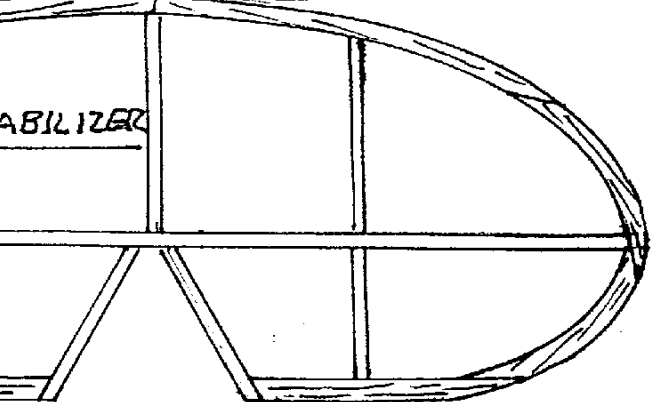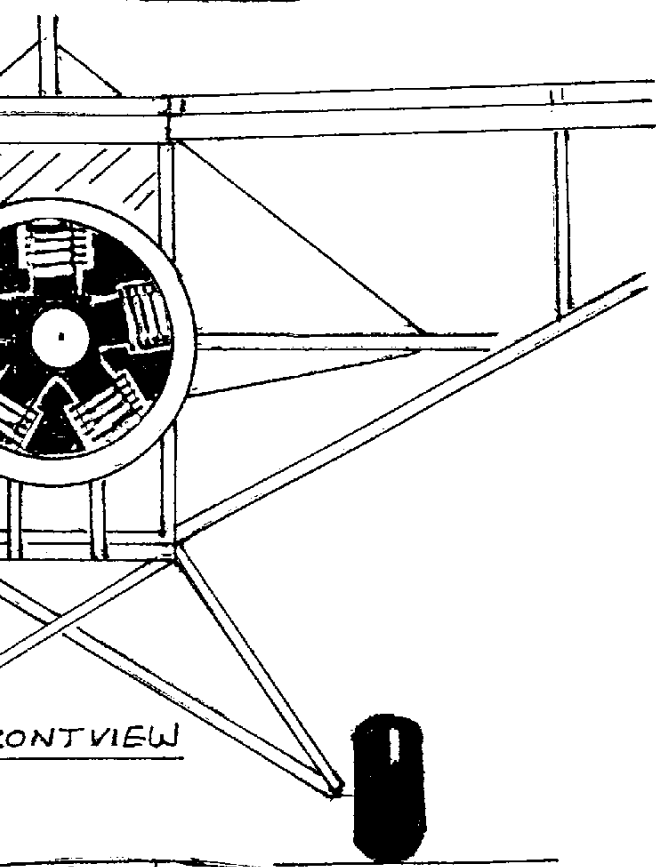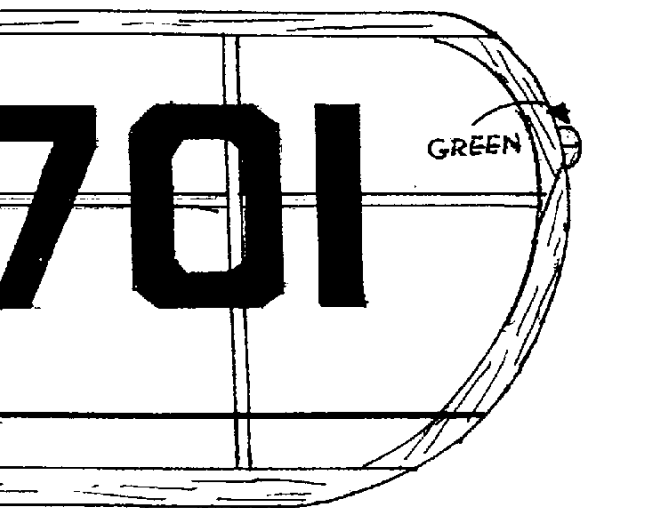

**ARWIN SPORTSTER**  
SCALE MODEL BY: F. BAECKE